



**BH9VA
BH9VD
BH9VP**

FOR "9V" CELL

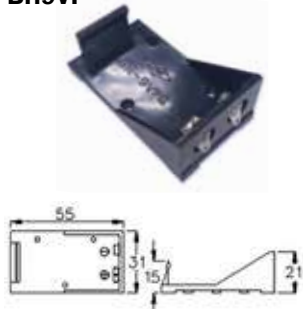

**BH9V-1A
BH9V-1D
BH9V-1P
BH9V-1T**

FOR "9V" CELL

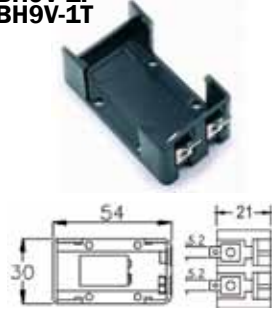

BH9V-2

FOR "9V" CELL




**BH9V-3A
BH9V-3D
BH9V-3P**

FOR "9V" CELL



**BH1/2AA-2A
BH1/2AA-2P**

FOR "1/2AA" CELL

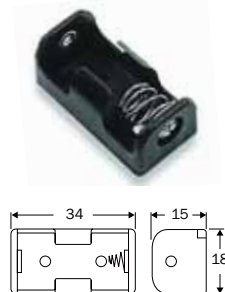

BH1/2AA-3S

FOR "1/2AA" CELL



BHC-1/2AA-P

FOR "1/2AA" CELL



BHC-CR123A-1-SMT

FOR "CR123A" CELL



BHC-CR123A-2P

FOR "CR123A" CELL



**BHC-18650-1A
BHC-18650-1P**

FOR ONE
"18650" CELL



**BHC-18650-2A
BHC-18650-2P**

FOR TWO
"18650" CELLS



BHC-18650-3-SMT

FOR ONE
"18650" CELL

